

WAKESHADE

Clamp Size Chart

CONTACT US

✉ info@wakeshade.com

☎ (801) 563-9600 🌐 www.Wakeshade.com

📍 7526 So. State St., Midvale, UT 84047

To determine the right size clamp for your boat follow these steps:

1. Print this page to actual size or 100% scale.
2. Cut out the length chart along the dotted lines.
3. Measure the circumference of the bar where the clamps will attach.
4. Select the clamp size that fits your tower or t-top bar.
5. If the circumference is between two clamp size options, please select the size that is closest to the circumference of your bar.

*If our standard clamp sizes don't work, let us know. We can likely create the size you need.

SIZES & RULER

The clamps come with rubber inserts used to accommodate a range of tower and t-top bar sizes.

DIAMETER	1 1/4"	1 3/8"	1 1/2"	1 5/8"	1 3/4"	1 7/8"	2"	2 1/8"	2 1/4"	2 3/8"	2 1/2"	2 5/8"	2 3/4"	2 7/8"	3"
CIRCUMFERENCE	3.93"	4.32"	4.71"	5.1"	5.5"	5.89"	6.28"	6.68"	7.0"	7.46"	7.85"	8.25"	8.64"	9"	9.42"
CLAMP SIZE	EXTRA SMALL			SMALL			MEDIUM				LARGE				

PRINTER CHECK: Measure this box to check accuracy.

